#### **BRACHYTHERAPY**

#### Dario Terribilini

# **MINSEL**SPITAL

UNIVERSITÄTSSPITAL BERN HOPITAL UNIVERSITAIRE DE BERNE BERN UNIVERSITY HOSPITAL

Dario Terribilini, Ph.D. SSRMP Div. of Med. Radiation Physics Inselspital - University of Berne CH-3010 Berne Switzerland


Phone: +41 31 632 1898 Fax: +41 31 632 2676

Email: dario.terribilini@insel.ch

www.ams.unibe.ch www.insel.ch



# www.estro.org/

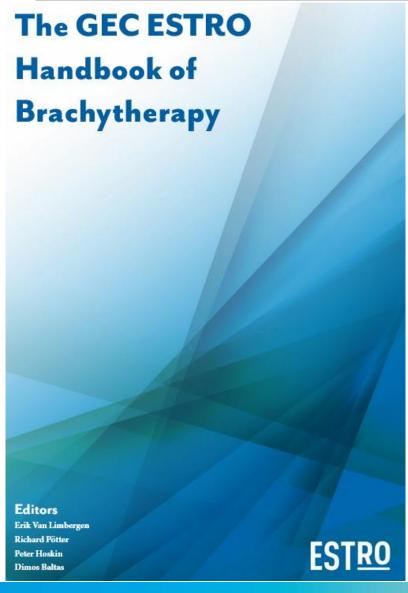

#### **TABLE OF CONTENTS**

Introduction to the electronic book version

#### PART I: THE BASICS OF BRACHYTHERAPY

Chapter 1: General aspects (EVL, RP, PH, NN (physicist)) - 1st edition 2002

Chapter 2: Brachytherapy physics and dosimetry - 2nd edition 2014

Chapter 3: Radiation protection - 2<sup>nd</sup> edition 2014

Chapter 4: Brachytherapy equipment and quality assurance

Chapter 5: Radiobiology of LDR, HDR, PDR and VLDR brachytherapy - 2<sup>nd</sup> edition 2015

Chapter 6: Modern imaging in brachytherapy - 1st edition 2002

Chapter 7: Principles of brachytherapy planning systems


Chapter 8: Treatment planning and evaluation

Chapter 9: Reporting in brachytherapy - 1st edition 2002

# www-naweb.iaea.org/nahu/ DMRP/RadiationOncologyPhysicsHandbook.html

#### Dosimetry and Medical Radiation Physics (DMRP)

#### Radiation Oncology Physics Handbook

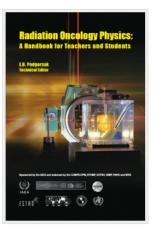

The IAEA has published "Radiation Oncology Physics: a handbook for teachers and students" aiming at providing the minimum level of knowledge expected of a medical physicist specializing in radiation therapy.

As a complement to the publication, a set of slides following closely the material in the book has been developed. The slides are designed to be useful to IAEA experts, as teaching material during training events, for students engaged in self-directed studies and for teachers and other interested professionals.

Please, let us know if you discover any errors in the handbook or slides, or if you have suggestions as to the appropriateness of the content or its level. Please, respond in writing to dosimetry@iaea.org.

Download PDF version of the book (19.04 MB)

Dowload the Powerpoint version of the slides

#### Set of accompanying slides for the handbook

Chapter 1. Basic Radiation Physics

Chapter 2: Dosimetric Principles, Quantities and Units

Chapter 3: Radiation Dosimeters

Chapter 4: Radiation Monitoring Instruments

Chapter 5: Treatment Machines for External Beam Radiotherapy

Chapter 6: External Photon Beams: Physical Aspects

Chapter 7: Clinical Treatment Planning in External Photon Beam Radiotherapy

Chapter 8: Electron Beams: Physical and Clinical Aspects

Chapter 9: Calibration of Photon and Electron Beams

Chapter 10: Acceptance Tests and Commissioning Measurements

Chapter 11: Computerized Treatment Planning Systems for External Photon Beam Radiotherapy

Chanter 17. Annual Chanter

Chapter 13: Brachytherapy: Physical and Clinical Aspects

hapter 14: basic Radiobiology

Chapter 15: Special Procedures and Techniques in Radiotherapy

Chapter 16: Radiation Protection and Safety in Radiotherapy

# Chapter 13 Brachytherapy: Physical and Clinical Aspects

This set of 163 slides is based on Chapter 13 authored by N. Suntharalingam, E.B. Podgorsak, H. Tolli of the IAEA publication (ISBN 92-0-107304-6):

Radiation Oncology Physics:
A Handbook for Teachers and Students

#### **Objective:**

To familiarize students with basic physical and clinical principles of brachytherapy.





Slide set prepared in 2006 (updated Aug2007) by E.B. Podgorsak (McGill University, Montreal) Comments to S. Vatnitsky: dosimetry@iaea.org

- Brachytherapy (also referred to as Curietherapy) is defined as a short-distance treatment of malignant disease with radiation emanating from small sealed (encapsulated) sources.
- □ The sources are placed directly into the treatment volume or near the treatment volume.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 1 (3/163)

#### External beam radiotherapy

(external source of radiation)

Source

# X-ray tube Cobalt-60 teletherapy

Linear accelerator (linac)


## Brachytherapy

(internal source of radiation)

Cs-137 Ir-192 I-125 Pd-103 Sealed


Co-60

sources

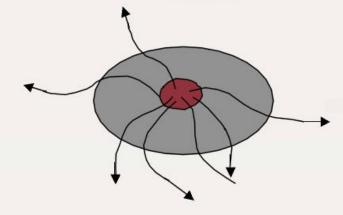

Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 2 (4/163)

## Introduction

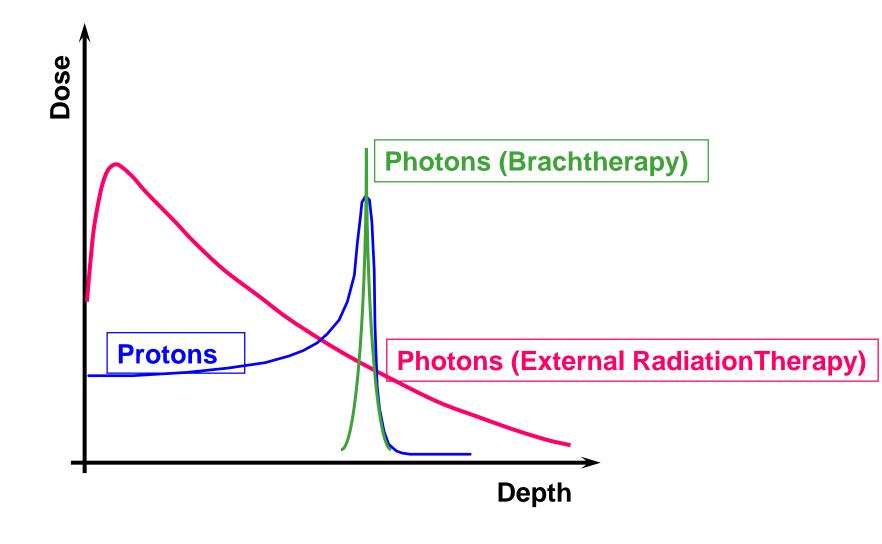

#### Brachytherapy compared to external beam therapy:

- Advantages of brachytherapy
  - Improved localized dose delivery to the target
  - Sharp dose fall-off outside the target volume
  - Better conformal therapy
- Disadvantages of brachytherapy
  - Only good for well localized tumors
  - Only good for small lesions
  - Very labor intensive



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 3 (5/163)

#### Brachytherapy sources:

Photon sources

Emit gamma rays through gamma decay and possibly characteristic x rays through electron capture and internal conversion (examples: Co-60, Cs-137, Ir-192, I-125, Pd-103)

Beta sources

Emit electrons following beta source decay (example: Sr-90/Y-90)

Neutron sources

Emit neutrons following spontaneous nuclear fission (example: Cf-252)


■ Miniature X-Ray sources (50 kV)




Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 5 (7/163)

13.2.1 Practical considerations

- Dosimetric characteristics of brachytherapy sources:
  - Photon energy
  - Half-life
  - Half-value layer in shielding materials
  - Specific activity
  - Source strength
  - Inverse-square dose fall-off

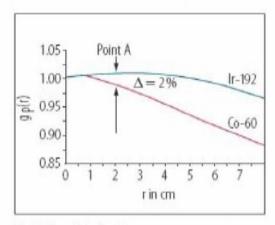

Radial Dose Rate Function

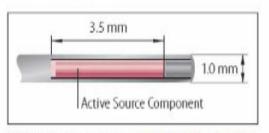


Miniaturised Co-60 Source for HDR afterloading



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.1 Slide 3 (19/163)

# **Photon Source Characteristics – Physics**

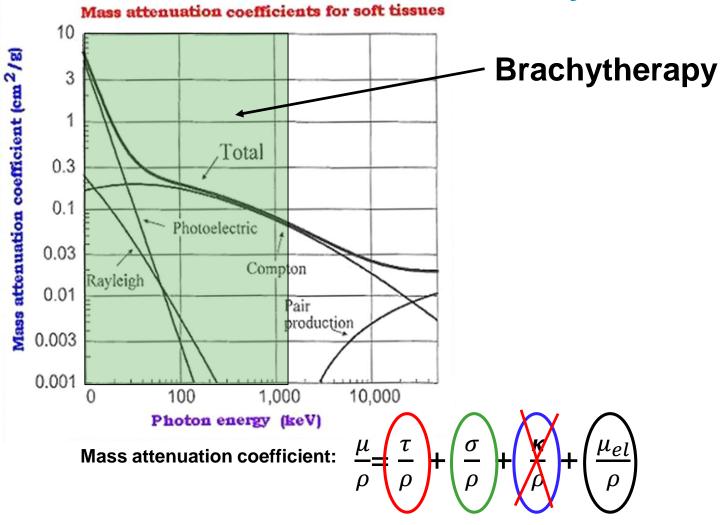

Photoelectric effect ( $\tau_{photo} \sim Z^{-4} E_{\gamma}^{-3}$ )

Compton effect


**Pair production** 

**Elastic scattering** 

# **Photon Source Characteristics – Physics**

- Photon Energy of the brachytherapy source influences:
  - -Penetration into tissue
  - Radiation protection requirements

Inverse-square law

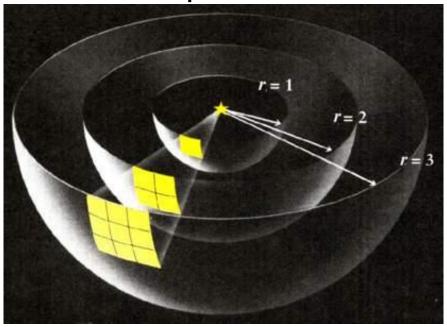

# Photon Source Characteristics – Radioactive decay

$$N(t) = N_o e^{-\lambda t}$$

#### where:


- N<sub>o</sub> is the initial number of radioactive atoms
- N is the number of radioactive atoms at time t
- λ is the decay constant
  - $\lambda = \frac{ln2}{t_{1/2}}$ , and  $t_{1/2}$  is the half-life of the radionuclide

Further, the mean-life  $T_{avg}$  of an isotope is defined as the time taken to decay to 1/e of the original number of atoms:

$$\frac{N(t)}{N_0} = e^{-1} \Rightarrow \lambda t = 1 \Rightarrow T_{avg} = \frac{T_{1/2}}{\ln 2} = 1.44 * T_{1/2}$$

#### **Cumulative Dose**

In calculating the total dose delivered during the implant one must consider the exponential decay of the source strength.

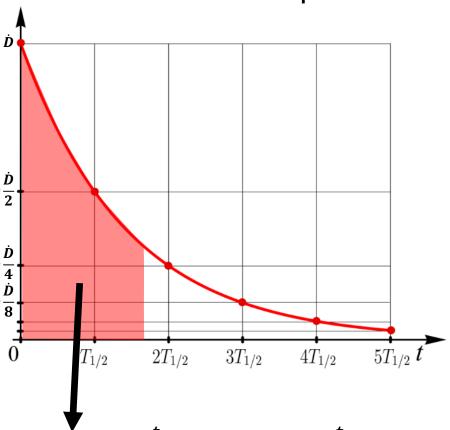

$$D_{cum}(t) = \int_{0}^{t} \dot{D}(t) dt = \dot{D}_{o} \int_{0}^{t} e^{-\lambda t} dt = \frac{\dot{D}_{o}}{\lambda} \{1 - e^{-\lambda t}\} = \frac{T_{1/2} \dot{D}_{o}}{\ln(2)} \{1 - e^{-\frac{t * \ln(2)}{T_{1/2}}}\}$$

#### **Cumulative Dose**

$$D_{cum} = \frac{T_{1/2}\dot{D}_o}{ln(2)} \left\{ 1 - e^{-\frac{t*ln(2)}{T_{1/2}}} \right\}$$

**Permanent implants**:  $t \gg T_{1/2}$ 

$$D_{cum} = \frac{T_{1/2}\dot{D}_o}{\ln(2)} \left\{ 1 - e^{-\frac{t*\ln(1)}{1/2}} \right\}$$

$$D_{cum} = \frac{T_{1/2}\dot{D}_o}{ln(2)}$$

**Temporary implants**:  $t \ll T_{1/2}$ 

$$1 - \frac{t * \ln(2)}{T_{1/2}}$$

$$D_{cum} = \frac{T_{1/2}\dot{D}_0}{\ln(2)} \left\{ 1 - e^{-\frac{t*\ln(2)}{1/2}} \right\}$$

$$D_{cum} = \dot{D}_o$$
t

## **Photon Sources**

#### Radionuclides Photons


Radionuklid	Energiebereich		$HVL_{Pb}$	Halbwertszeit	Anwendungs-	${f A}_{ m spezifische}$
	E (keV)	Energie	(mm)	$T_{1/2}$	art	(GBq/g)
		< E > (keV)				
<sup>226</sup> Ra	47-2450	830	8.0	1620y	temporär	37
<sup>241</sup> Am		60	0.125	432y	temporär	125.8
<sup>137</sup> Cs		662	5.5	30y	temporär	$295.8 \times 10^{1}$
<sup>60</sup> Co	1170, 1330	1250	11	5.26y	temporär	$40.7 \times 10^3$
<sup>192</sup> Ir	136-612	380	2.5	73.9d	temporär	$340.4 \times 10^3$
$^{125}{ m I}$	27-35	28	0.025	59.6d	permanent	$62.9 \times 10^4$
<sup>169</sup> Yb	10-308	93	0.2	32d	permanent	$88.8 \times 10^4$
<sup>103</sup> Pd	20-23	21	0.008	17d	permanent	277.5 x 10 <sup>4</sup>
<sup>198</sup> Au		412	2.5	2.7d	permanent	$88.8 \times 10^5$

## Cesium 137

Cesium 137, a fission byproduct, is a popular radium substitute because of its 30-year half-life.


Its single  $\gamma$ -ray (0.66 MeV) is less penetrating (HVL<sub>Pb</sub> = 0.65 cm) than the  $\gamma$ -rays from radium (HVL<sub>Pb</sub> = 1.4 cm) or  $^{60}$ Co (HVL<sub>Pb</sub> = 1.1 cm).

Because <sup>137</sup>Cs decays to solid barium 137, <sup>137</sup>Cs sources have virtually replaced <sup>226</sup>Ra intracavitary tubes in LDR gynecologic applications.

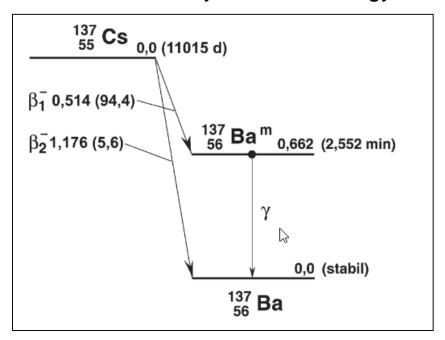

## Iridium 192

<sup>192</sup>Ir is produced in the nuclear reactor in the reaction <sup>191</sup>Ir(n,γ)<sup>192</sup>Ir. <sup>191</sup>Ir composes 37.3% of natural iridium, <sup>193</sup>Ir making 62.7%.

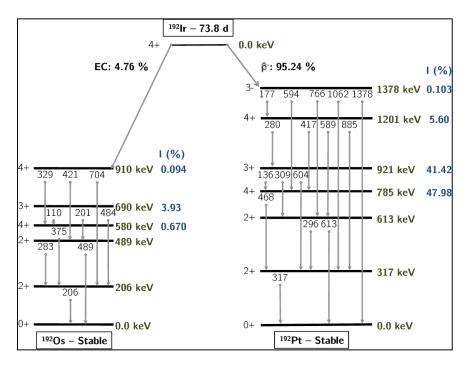

Complex decay pattern leading to a photon spectrum with mean energy of ca. 380 keV

High specific activity→small sources

Half life: 73.8 days

#### Palladium 103

<sup>103</sup>Pd can be produced:

> By neutron activation of <sup>102</sup>Pd: <sup>102</sup>Pd(n,γ)<sup>103</sup>Pd. (<sup>102</sup>Pd occurs only at 0.9% level)

➤ By nuclear reaction with a proton beam on rhodium 103: <sup>103</sup>Rh(p,n)<sup>103</sup>Pd. (natural abundance of <sup>103</sup>Rh: 100%).


In practice, this isotope can be produced with a very high specific activity, more than

2500 GBq/mg.

<sup>103</sup>Pd decays by electron capture to excited states of Rh-103 followed by characteristic x-ray emission 20-23 keV photons (average 21 keV)

Half-life: 17 days

Widely used for permanent implants

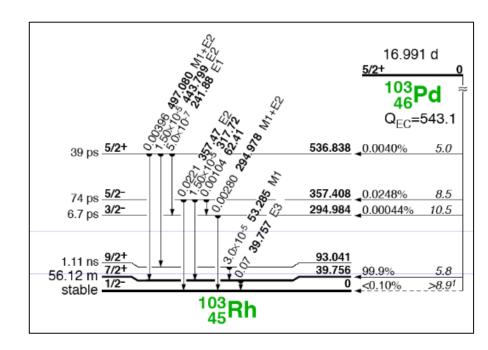

## **lodine 125**

<sup>125</sup>I is produced mainly in a neutron capture process (in reactors), through xenon 124 (<sup>124</sup>Xe) gas target: <sup>124</sup>Xe(n, γ)<sup>125</sup>Xe.

<sup>125</sup>Xe decays into <sup>125</sup>I by electron-capture (EC) transition:  $^{125}$ Xe  $\rightarrow$  <sup>125</sup>I + v + E<sub>b</sub>.


<sup>125</sup>I decays by EC into an excited state <sup>125</sup>Te\*, producing the maximum photon energy of 35.5 keV by gamma decay (6.7% of the time).

In addition, the transition leads to characteristic x-rays of energy between 27.2 to 31.7 keV (K-shells) as a result of internal conversion (93.3%).

The specific activity of <sup>125</sup>I is more than 600 GBq/mg

Half life: 59.4 days

lodine seeds are widely used for permanent implants (prostate seed implants) and also eye plaques.

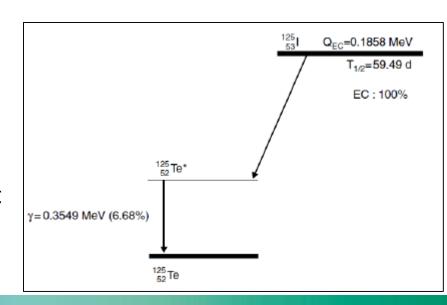

#### **Photon Source Characteristics**

# **High Dose Rate Brachytherapy Sources**

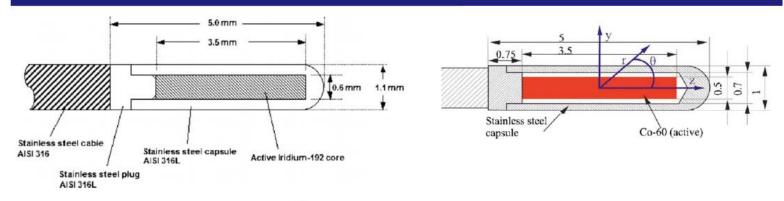


Figure 1. Schematic drawing of the Nucletron 'Classic' 192 Ir HDR brachytherapy source.


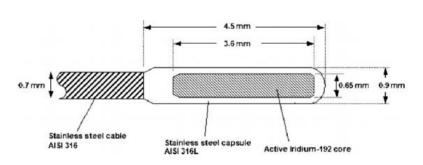


Figure 2. Schematic drawing of the Nucletron 'V2' 192 Ir HDR brachytherapy source.






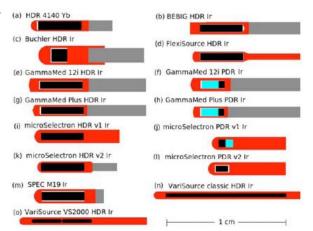

## **Photon Source Characteristics**


# Low Dose Rate Brachytherapy Sources

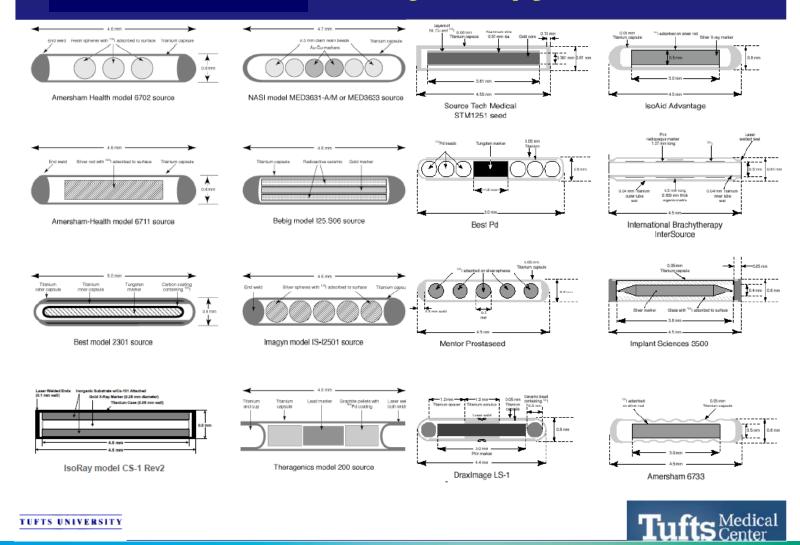



#### **Photon Source Characteristics**

## Electronic X-Ray Source

- 50 kV, 0.3 mA, 15 W
- Water cooled
- Can be used as HDR source

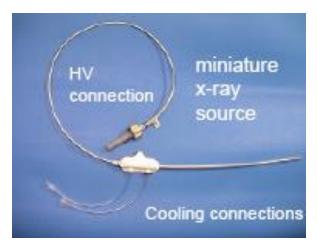

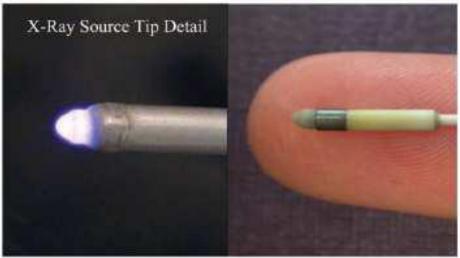

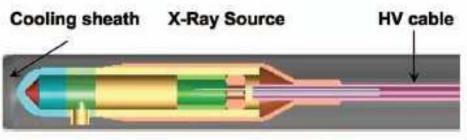

Rivard et al, Med Phys. 33(11), 2006

# Photon Source Characteristics – Source Specification

# **Activity**

#### **Historic units:**

- For Radium: [mg Ra] → «Dose» specification in [milligram-hours]
- For other nuclides: [mg Ra equivalent]
- 1 [Ci] = 1 [mg Ra] = 3.7 \* 10<sup>10</sup> [disintegration / sec]

#### SI Unit

1 [Bq] = 1 [disintegration / sec] → 1[Ci] = 3.7 \* 10<sup>10</sup> [Bq]

# Photon Source Characteristics – Source Specification

The amount of radiation emitted depends on the source geometry (filtration and self absorption)

Specification of source strength as "activity"

- Difficult to measure accurately and reproducibly both by the vendor and the user
- Variability in the factor to convert activity to dose in the patient

#### 13.2.4 Source specification

- Specification of gamma ray sources:
  - (1) Reference air kerma rate in air  $(K_{air}(d_{ref}))_{air}$
  - (2) Air kerma strength S<sub>K</sub>
  - (3) Exposure rate in air X<sub>P</sub>
  - (4) Air kerma rate in air  $(K_{air}(d))_{air}$

KERMA is an acronym for Kinetic Energy Released per unit MAss. In this context, the kerma is defined as the mean energy transferred from the indirectly ionizing radiation to charged particles (electrons). The unit of kerma is Joule per kilogram = Gray.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.4 Slide 1 (25/163)

13.2.4 Source specification

- Specification of gamma ray sources:
  - (1) Reference air kerma rate in air  $(K_{air}(d_{ref}))_{air}$ , defined by the ICRU (reports No. 38 and 58) as the air kerma rate in air at a reference distance  $d_{ref}$  of 1 m, corrected for air attenuation and scattering (unit: 1  $\mu$ Gy/h).

The SI unit of the reference air kerma rate is Gy/s, but for the purposes of source specification it is more convenient to use  $\mu$ Gy/h for LDR sources and  $\mu$ Gy/s for HDR sources.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.4 Slide 2 (26/163)

#### 13.2.4 Source specification

- Specification of gamma ray sources (cont.):
  - (2) Air kerma strength  $S_K$ , defined by the AAPM as

$$S_{K} = (\dot{K}_{air}(d_{ref}))_{air} \times d_{ref}^{2}$$

The unit of air kerma strength is  $\mu$ Gy·m<sup>2</sup>·h<sup>-1</sup>.

AAPM TG 43 recommends a shorthand notation with U  $1 \text{ U} = 1 \mu \text{Gy} \cdot \text{m}^2 \cdot \text{h}^{-1} = 1 \text{ cGy} \cdot \text{cm}^2 \cdot \text{h}^{-1}$ 



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.4 Slide 3 (27/163)

#### 13.2.4 Source specification

- Specification of gamma ray sources (cont.)
  - (4) Air kerma rate in air  $(K_{air}(d))_{air}$  at point P in air at a distance d from the source:

$$(\dot{K}_{air}(d))_{air} = \frac{A_{app}\Gamma_{AKR}}{d^2}$$


where

 $A_{\rm app}$  is the apparent activity of the source in Bq  $\Gamma_{\rm AKR}$  is the air kerma rate constant given in( $\mu$ Gy·m²)/(GBq·h) d is the distance from the source in m



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.4 Slide 5 (29/163)

# **Photon Source – Source Strength**

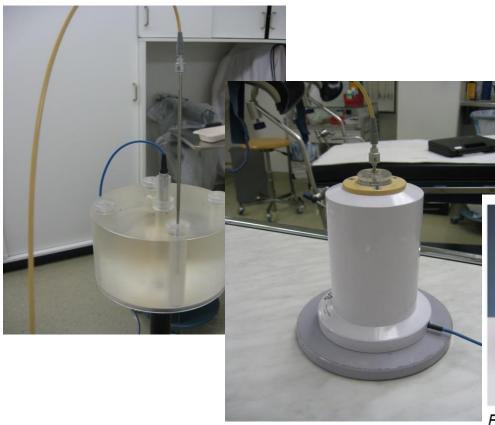

**Well-Chamber** 

Figure 2: SourceCheck source strength device

# **Source Strength – Certificate**

# **Certificate For sealed Sources**

G2-00025V

Serial Number of Afterloader:

Customer Name and Address: INSELSPITAL

FREIBURGSTRASSE 10

3010 BERN SWITZERLAND

Issue Date: 2016-10-20 (1)

Model Designation:

Serial Number:

Production Code:

REF SN LOT

105.002 D36G2082

27344/02

(DRN 07736)

Manufacturer Code: NLF 01 (7)

Serial Number of Transport Container: 2551C6

Serial Number of Check Cable: Not applicable

Certificate Number: KLbS9 Kv@o+ V&BBn wX@Rd h1

#### SOURCE SPECIFICATIONS

Reference Air Kerma Rate: 43.31 mGy h<sup>-1</sup> +/- 5% at 1 m <sup>(2)</sup>

Measured at: 2016-10-19 15:33 CET (1)


Estimated Content Activity: 393.7 GBq ( 10.64 Ci) at date of measurement (3,4)

Source Type: MICROSELECTRON V2

Capsule Dimensions: 0.9 mm diameter, 4.5 mm length

#### **Beta sources - Strontium-90**

Bye product of nuclear fission

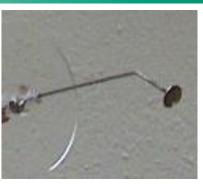


 Therapeutic radiation is primarily from 2.27 MeV betas from Y-90

Suitable for treatment of superficial lesions, ocular lesions

and coronary vessels

Limited depth of penetration

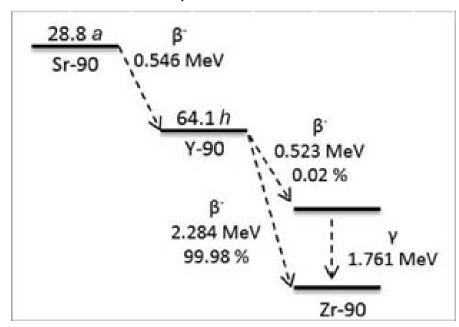

#### 13.2 BETA SOURCE CHARACTERISTICS

#### 13.2.4 Source specification

- Specification of beta ray sources: Sr-90/Y-90
  - The recommended quantity for the specification of beta ray sources is the reference absorbed dose rate in water at a reference distance from the source.
  - The reference distance differs from one type of source to another and is generally between 0.5 mm and 2 mm from the source.
  - SGSMP recommendation #14 "Physical aspects of intravascular brachytherapy of the coronary arteries" recommends 2 mm and also includes quality assurance measures.

http://www.sgsmp.ch/r14ivb-e.pdf



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.2.4 Slide 6 (30/163)

#### Brachytherapy classification with respect to treatment duration:

- Temporary implant
  - Dose is delivered over a period of time that is short in comparison with the half-life of the sources.
  - Sources are removed when the prescribed dose has been reached.
- Permanent implant
  - Dose is delivered over the lifetime of the sources.
  - The sources undergo complete radioactive decay.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 8 (10/163)

#### Types of brachytherapy implants:

Intracavitary: Sources are placed into a body cavity.

Gynecological applications, rectum

Interstitial: Sources are implanted into the tumor volume. HNO, lip, eyelid, mamma, rectum, prostate

Surface plaque: Sources are loaded into a plaque which is brought

into contact with a skin surface lesion or eye cornea

Intraluminal: Sources are inserted into a lumen.

Bronchus, oesophagus, HNO

Intraoperative: Sources are brought surgically into or near the

tumor volume

Single catheter or flabs

Intravascular: Sources are brought intravascularly into a lesion or

near a lesion



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 7 (9/163)

Brachytherapy classification with respect to dose rate:

- Low dose rate (LDR) (0.4 2 Gy/h)
- Medium dose rate (MDR) (2 12 Gy/h)
- ☐ High dose rate (HDR) ( > 12 Gy/h)
- Pulsed dose rate (PDR): Simulation of a low dose rate (LDR) treatment (50-100cGy/h) by a series of short dose pulses separated by intervals of 1 hour to several hours



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 13 (15/163)

#### 13.1 INTRODUCTION

## Brachytherapy classification with respect to source loading:

Hot loading

The applicator is pre-loaded and contains radioactive sources at time of placement into the patient.

Afterloading

The applicator is placed first into the patient and the radioactive sources are loaded later

- either by hand (manual afterloading)
- or by machine (automatic remote afterloading)



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 9 (11/163)

#### 13.1 INTRODUCTION

## Manual afterloading

- Generally, the radiation sources are afterloaded manually into applicators or catheters that have been placed within the target volume. At the end of treatment the sources are removed, again manually.
- Manual loading and removal of sources from the applicators or catheters result in some radiation exposure to the medical and support staff.









Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 10 (12/163)

#### 13.1 INTRODUCTION

## Remote afterloading

- To minimize radiation exposure to medical and support staff several computer driven remote afterloading systems have been developed.
- The use of remote afterloading machines offers several practical advantages over manual procedures, such as:
  - Increased patient treatment capacity.
  - Consistent and reproducible treatment delivery.
  - Reduced radiation exposure to staff.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.1 Slide 11 (13/163)



Flexitron (Elekta)



(Eckert & Ziegler BEBIG)


MultiSource

microSelectron (Elekta)







GammaMed (Varian)

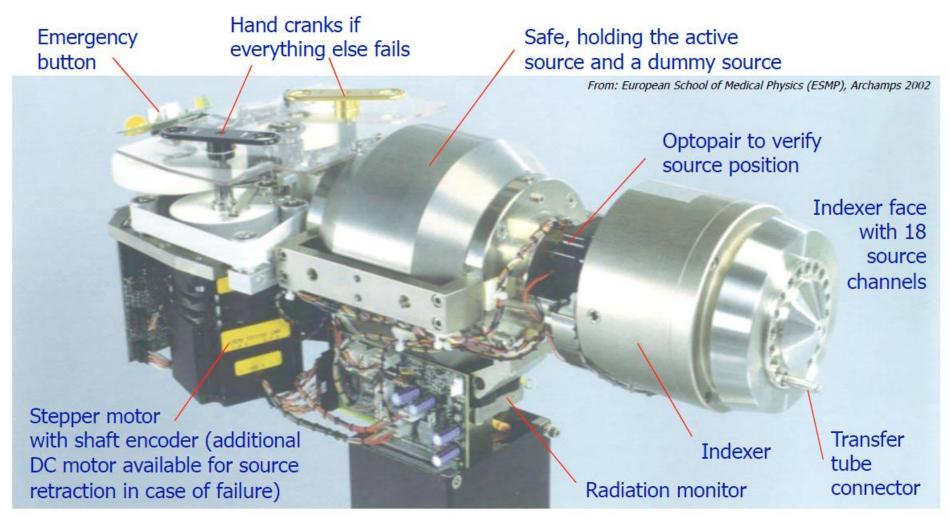


Radiation survey

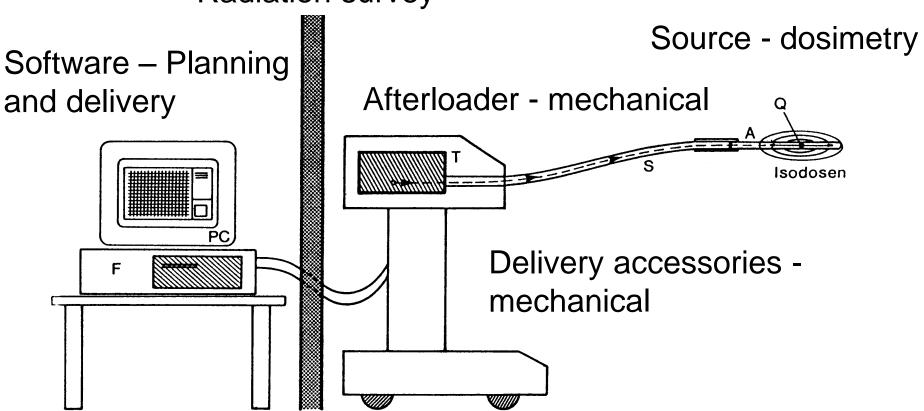

Safety – emergency stops

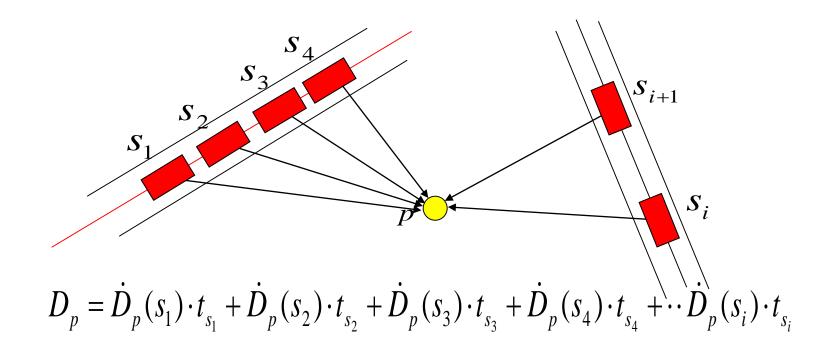

lod-125 SeedSelectron

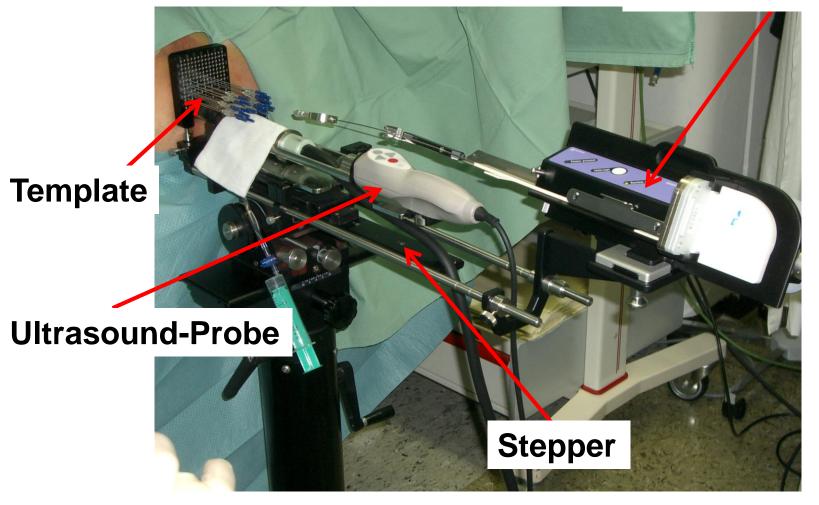


# **Brachytherapy - Applicators**

Surface applicators

Leipzig applicators

Gynecological applicators

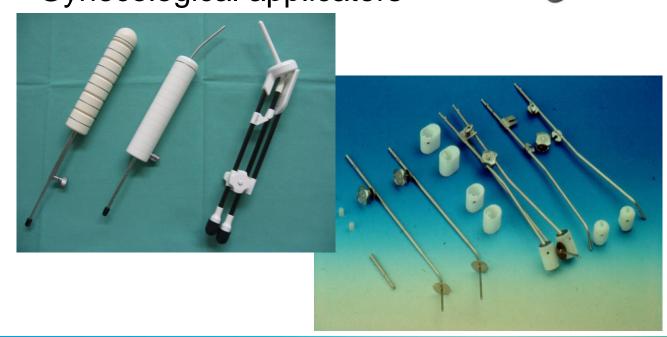


# **Brachytherapy - Applicators**

**Needles** 



Catheters

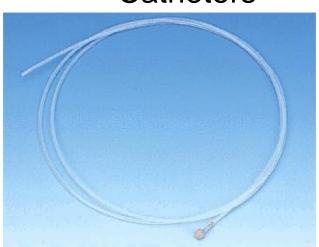

Endobronchial tube

**Breast applicators** 



Freiburg Flaps

### Dose distribution around a sources

Dose calculation around radioactive sources in brachytherapy can be devided in three main categories:

- Historical approaches to dose calculation (may be used for quick checks and verification of treatment plans):
  - Point source calculation based on air kerma in air
  - Line source calculation based on air kerma in air
- AAPM TG43 Formalism
- Model based dose calculation algorithms (MBDCA)

13.5.2 Other calculation methods for point sources

If source is calibrated in terms of reference air kerma rate in air  $(K_{air}(d_{ref}))_{air}$ , the air kerma rate in air at distance d is given by

$$(\dot{K}_{air}(d))_{air} = (\dot{K}_{air}(d_{ref}))_{air} \times (d_{ref}/d)^2$$


lacktriangle Absorbed dose rate to water  $\dot{D}_{wat}(d)$  is now given as

$$\dot{D}_{\text{wat}}(d) = \frac{\dot{K}_{\text{air}}(d_{\text{ref}}))_{\text{air}} \times M(d) \times (\mu_{\text{tr}} / \rho)_{\text{air}}^{\text{wat}} \times (1 - \overline{g}) \times (d_{\text{ref}} / d)^2}{(d_{\text{ref}} / d)^2}$$




Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.2 Slide 6 (99/163)


## Dose distribution around sources - Point Source

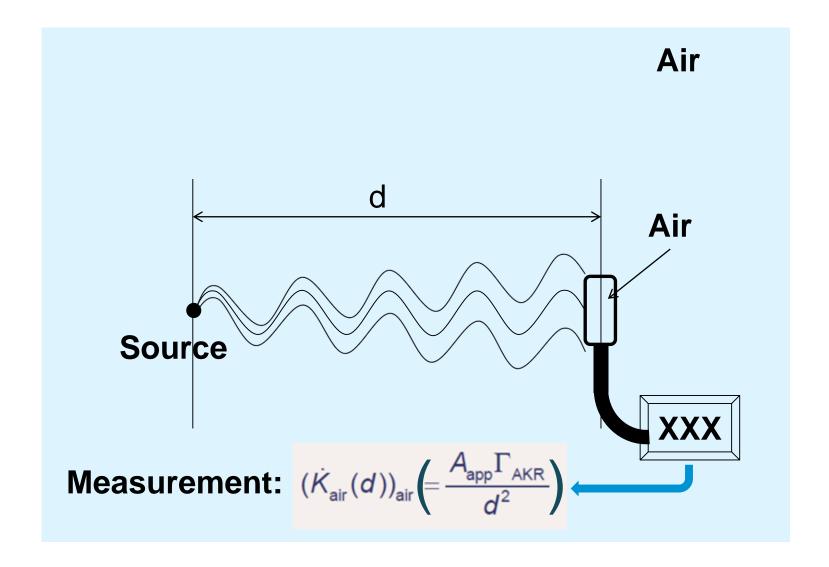

## Dose distribution around sources – Point Source

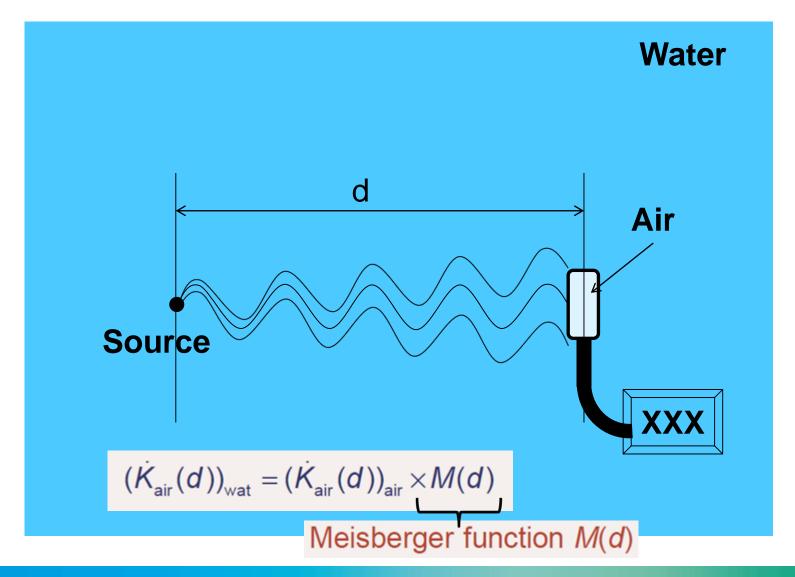


## **Dose distribution around sources – Point Source**

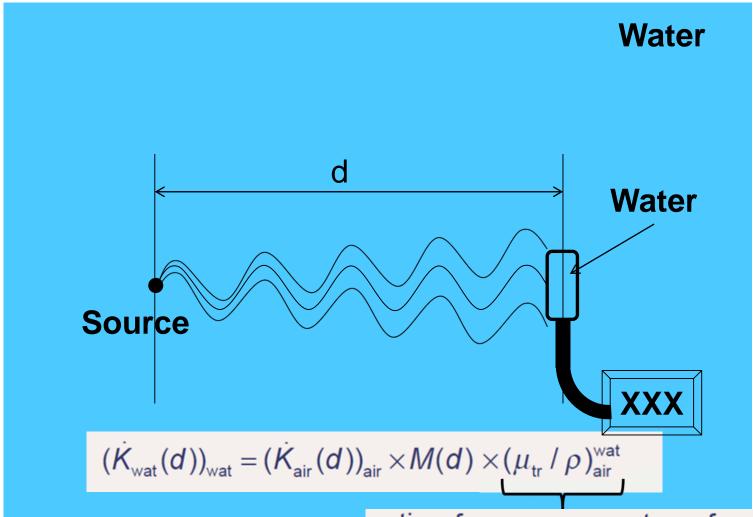

ratio of mass energy transfer coefficients


## **Dose distribution – Tissue attenuation factor M(d)**

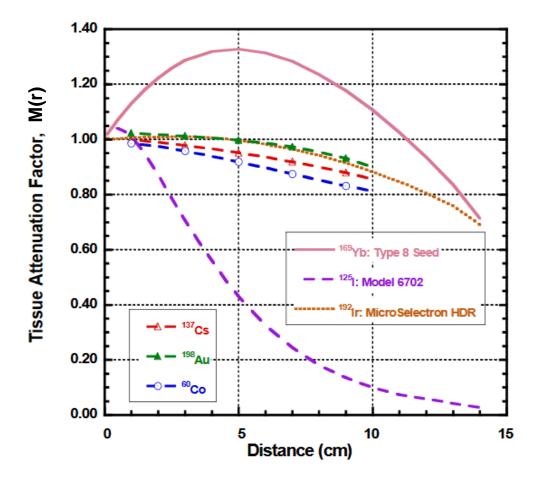

For energies >300keV the attenuation in tissue is compensated by scatter build up of dose.

Tissue attenuation is very significant for low photon energies (<30keV)

### **Dose distribution around sources – Point Source**

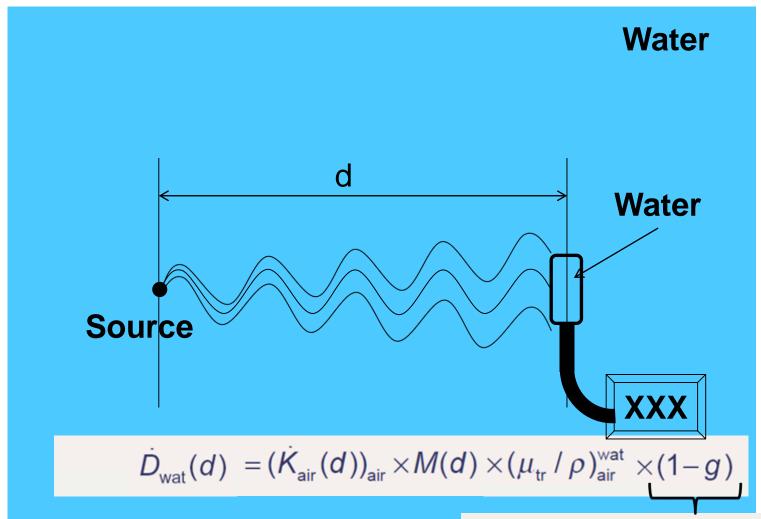

correction due to Bremsstrahlung

## Dose distribution around a sources

Ratio of mass energy transfer coefficients  $({}^{\mu_{tr}}/_{\rho})_{air}^{wat}$ :

- with photon energies above 200 keV the ratio is essentially constant at 1.11
- for iodine-125 and palladium-103 the ratio is 1.01.

The radiation fraction (Bremsstrahlung) is generally ignored because of its small magnitude (less than 0.3%) for the radionuclides used in brachytherapy.

The Meisberger function M(d) corrects for absorption and scattering in water.

13.5.3 Linear (line) sources

- Dose rate distributions around linear (line) brachytherapy sources can be calculated using the Sievert integral, introduced by Sievert in 1921.
- For purposes of dose distribution calculation, linear sources are assumed to consist of a number of small elementary point sources, each point source contributing to the total dose at the point of interest P.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.3 Slide 1 (101/163)

13.5.3 Linear sources

Dose rate in water around filtered line source

$$\dot{D}_{\text{wat}} = \frac{A\Gamma_{\text{AKR}}}{Lh} \left\{ \int_{0}^{\theta_{2}} e^{\frac{\mu t}{\cos \theta}} M(d,\theta) d\theta - \int_{0}^{\theta_{1}} e^{\frac{\mu t}{\cos \theta}} M(d,\theta) d\theta \right\} \left( \frac{\mu_{\text{tr}}}{\rho} \right)_{\text{air}}^{\text{wat}} (1 - \overline{g})$$

- $M(d,\theta)$  is the absorption and scatter correction varying over the source length.
- d is the distance between the source segment and the point of interest P.
- g is the radiation fraction.
- t is the thickness of the source capsule
  - is the attenuation coefficient for photon in the source capsule material



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.3 Slide 8 (108/163)

13.5.3 Linear sources

- Sievert integral  $\int_{0}^{e^{-\frac{1}{\cos\theta}}d\theta}$  is used in computing dose distributions for filtered brachytherapy line sources.
- The integral is named after Rolf Sievert, Swedish medical physicist, who developed it in 1921.
- The Sievert integral accounts for photon attenuation in the source capsule of the brachytherapy line source.
- For  $\theta$  < 0.35 radian (20°) the following approximation can be used


$$\int_{0}^{\theta_{2}} e^{-\frac{\mu t}{\cos \theta}} d\theta \approx \theta e^{-\mu t}$$



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.3 Slide 7 (107/163)

# 13.5 DOSE DISTRIBUTIONS AROUND SOURCES 13.5.1 AAPM TG 43 algorithm

■ The dose distribution is described in terms of a polar coordinate system with its origin at the source centre.

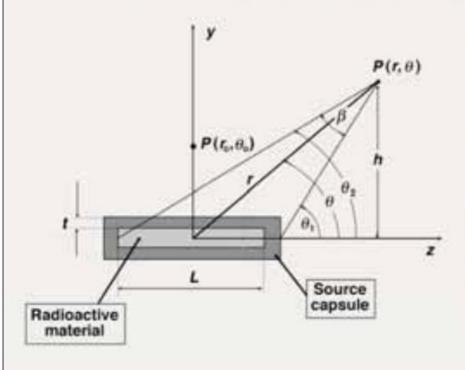

- r is the distance from the origin to the point of interest  $P(r,\theta)$
- $\theta$  is the angle with respect to the long axis of the source

Point P( $r_0$ ,  $\theta_0$ ) is the reference point that lies on the transverse bisector of the source at a distance of 1 cm from the origin ( $r_0$  = 1 cm and  $\theta_0$  =  $\pi$  / 2)



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.1 Slide 2 (82/163)

# 13.5 DOSE DISTRIBUTIONS AROUND SOURCES 13.5.1 AAPM TG 43 algorithm

The dose rate at point-of-interest  $P(r,\theta)$  in water is written as:

$$\dot{D}(r,\theta) = S_{\kappa} \Lambda \frac{G(r,\theta)}{G(r_{0},\theta_{0})} g(r) F(r,\theta)$$

r is the distance (in cm) from the origin to the point-of-interest P

 $\theta$  is the angle between direction of radius vector r and the long axis of the source

 $\theta_0$  defines the source transverse plane and is equal to  $\pi/2$  radians

 $S_{\kappa}$  is the air-kerma strength of the source ( $\mu Gy \cdot m^2 \cdot h^{-1}$ )

Λ is the dose rate constant in water

 $G(r,\theta)$  is the geometry factor

g(r) is the radial dose function

 $F(r,\theta)$  is the anisotropy function




Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.1 Slide 3 (83/163)

#### 13.5.1 AAPM TG 43 algorithm

- The AAPM TG 43 brachytherapy dosimetry protocol introduced new and updated quantities, such as:
  - Air kerma strength (as defined previously)
  - Dose rate constant to account for effects of source geometry and scattering in water surrounding the source on absolute dose rate at reference point (perpendicular over source centre)
  - Geometry factor to account for the deviation from the distance square law due to the source geometry (in three dimensions)
  - Radial dose function to account for the effects of attenuation and scatter in water on the transverse plane (excluding effects included in the geometry factor)
  - Anisotropy function to account for the anisotropy of the dose distribution, especially the effect of self absorption in and near the axis of the line source
  - (Anisotropy factor for simplified calculations, ignoring the shape of the anisotropy, and "averaging it out" in the absolute dose calculations: often used for 3-D implants with many sources of varying orientation, e.g. prostate implants)



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.5.1 Slide 1 (81/163)

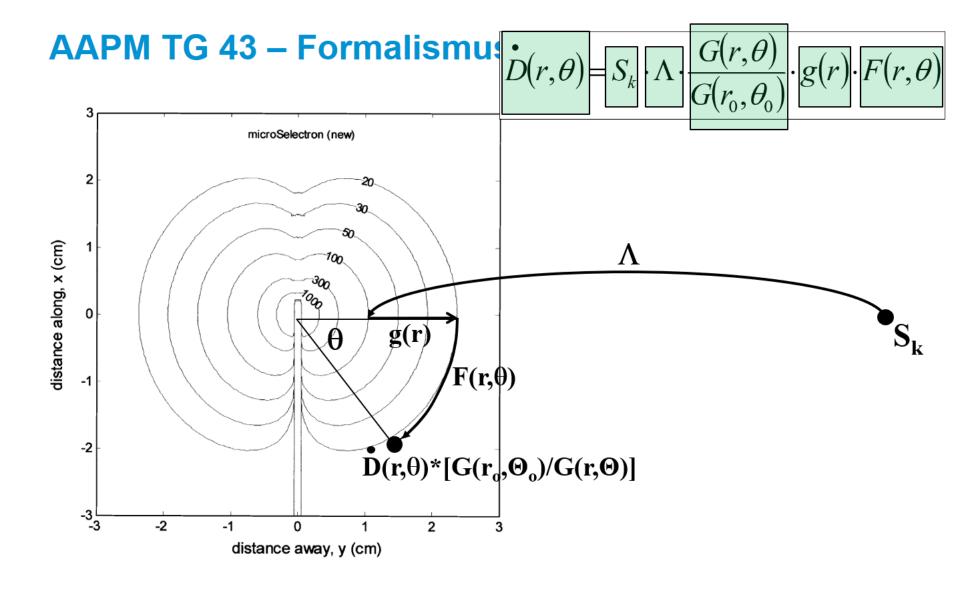

## AAPM TG 43 - ...some numbers for a Ir-192 Source

1.00

0.90

Kerma Strength: 
$$S_k = 30'000 \frac{\mu Gy \bullet m^2}{h} \left( = 3 \frac{cGy * m^2}{h} \right)$$


$$1U = 1 \frac{\mu G y \bullet m^2}{h}$$

(Typical value after source replacement)

Dose Rate Constant:  $\Lambda = 1.108 \frac{cGy}{h*U}$ 

Radial Dose Function:


Anisotropy Function:

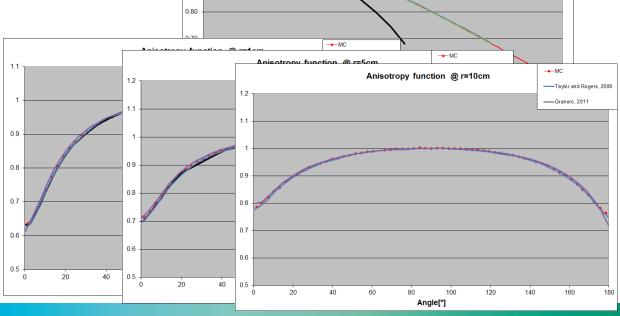

**Radial Dose Function** 

# **AAPM TG 43 – Assumptions & Limitations**

- Dose calculation in water
  - no material heterogeneities within the body
  - no applicators
  - no shieldings
  - no source interplay
- Infinite patient
  - no phantom size effect
- Azimuthal symmetry

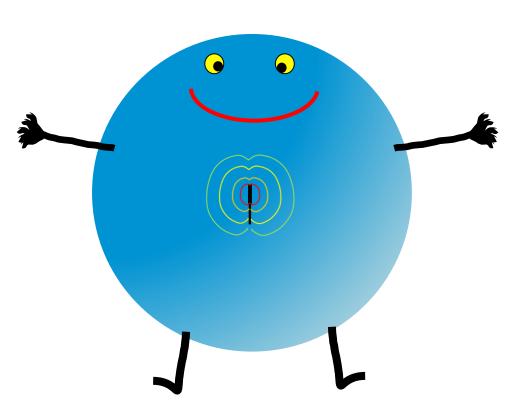

## **AAPM TG 43 – Limitations**

TABLE I. Sensitivity of commonly treated anatomic sites to dosimetric limitations of the current brachytherapy dose calculation formalism. Items flagged as "Y" indicate the authors opinion that significant differences between administered and delivered dose are possible due to the highlighted dosimetric limitation.

Anatomic site	Source energy	Absorbed dose	Attenuation	Shielding	Scattering	Beta/kerma dose
Prostate	High	N	N	N	N	N
	Low	Y	Y	Y	N	N
Breast	High	N	N	N	Y	N
	Low	Y	Y	Y	N	N
GYN	High	N	N	Y	N	N
	Low	Y	Y	N	N	N
Skin	High	N	N	Y	Y	N
	Low	Y	N	Y	Y	N
Lung	High	N	N	N	Y	Y
	Low	Y	Y	N	Y	N
Penis	High	N	N	N	Y	N
	Low	Y	N	N	Y	N
Eye	High	N	N	Y	Y	Y
	Low	Y	Y	Y	Y	N

# **Alternative Approaches**

Report of the Task Group 186 on model-based dose calculation methods in brachytherapy beyond the TG-43 formalism: Current status and recommendations for clinical implementation

Luc Beaulieua)

Département de Radio-Oncologie et Centre de Recherche en Cancérologie de l'Université Laval, Centre hospitalier universitaire de Québec, Québec, Québec G1R 2J6, Canada and Département de Physique,

Med. Phys. 39 (10), October 2012

0094-2405/2012/39(10)/6208/29/\$30.00

© 2012 Am. Assoc. Phys. Med

- The goal is to take
- patient inhomogeneities
- patient shape
- source interplays
- effects of applicators and shieldings into account which are ignored by the AAPM TG 43 protocol
  - Analytical Models (Convolution/Superposition, CC)
  - > Full Monte Carlo Simulations
  - Deterministic solutions of the transport equations (LBTE)

## **AAPM TG 186 – MBDCA**

- ACE (Collapsed Cone) of ELEKTA
- Full Monte Carlo
- Accuros (Boltzmann Solver) of Varian

# **MBDCA – Collapsed Cone / PSS Formalism**

Dose is deposited locally through primary electrons set in motion by a photon interaction and a large fraction through scattered components.

→ Separation of the primary dose and scattered dose components:

$$D = D_{prim} + D_{1sc} + D_{msc}$$

# **MBDCA – Collapsed Cone**

$$\mathbf{D} = \mathbf{D}_{\text{prim}} + \mathbf{D}_{1\text{sc}} + \mathbf{D}_{\text{msc}}$$


# $\mathbf{D}_{\text{prim}}$

- → Phantom size independent
- → Energy dependent
- → Source geometry dependent
- $\rightarrow$  Depends on local mass attenuation coefficient ( $\mu$ )

$$\mathbf{D}_{1sc} + \mathbf{D}_{msc}$$

- → Depend on phantom size
- → Energy dependent
- → Source geometry dependent
- $\rightarrow$  Depend on primary dose (D<sub>prim</sub>)

# **MBDCA – Collapsed Cone**

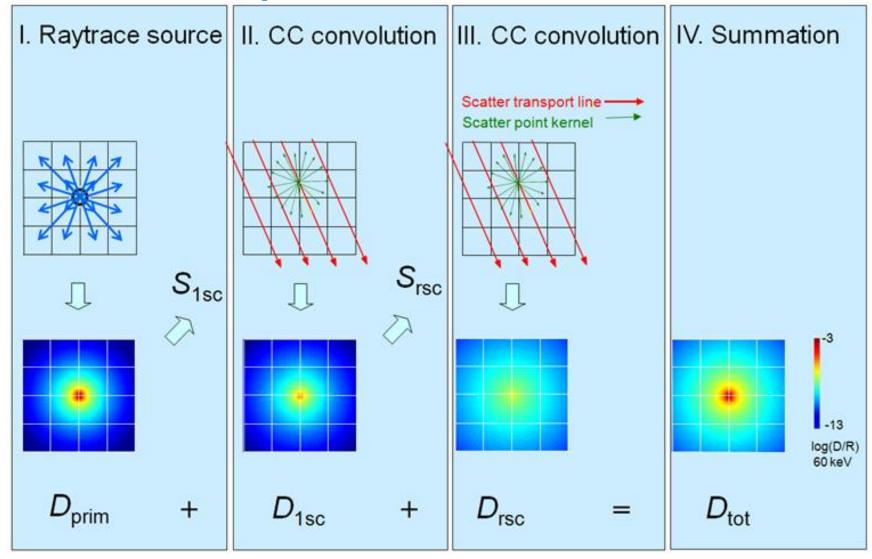



Ahnesjö, Dreiländertagung 2007 Bern

## **AAPM TG 186 – MBDCA**

- ACE (Collapsed Cone)
- Full Monte Carlo
- Accuros (Bolzmann Solver) of Varian



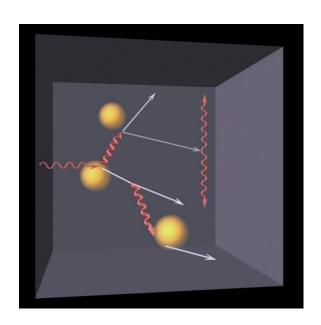

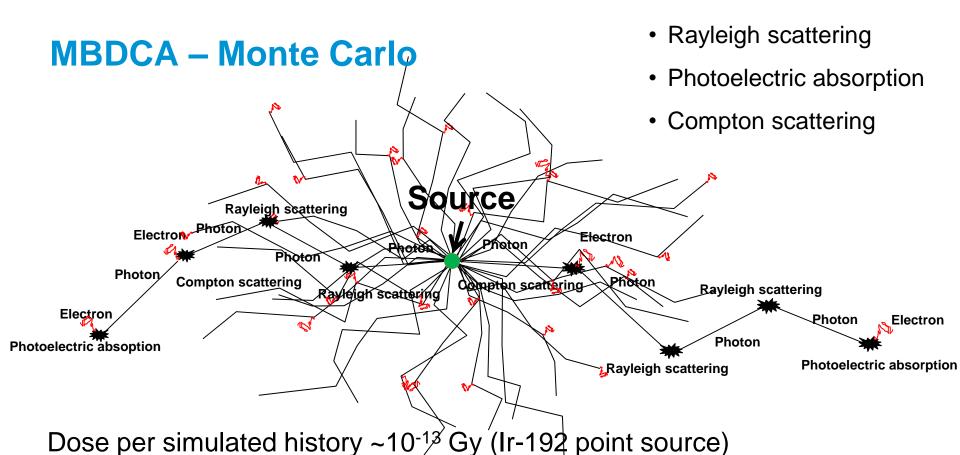

→ For 1 Gy about 10'000'000'000'000 histories needed!!

"Only" ~1'000'000'000 histories are simulated for statistically acceptable results

→ Monte Carlo provide the user with an estimate of the solution.

## **AAPM TG 186 – MBDCA**

- ACE (Collapsed Cone) of ELEKTA
- Full Monte Carlo
- Accuros (Boltzmann Solver) of Varian

### MBDCA – Boltzmann Solver

An alternative approach is to solve the steady state Boltzmann transport equation in a Cartesian coordinate system:

Streaming operator

$$\hat{\Omega} \cdot \vec{\nabla} \Psi(\vec{r}, E, \hat{\Omega})$$

Number of particles flowing into a volume dV, minus the number of particles flowing out of dV for particles travelling in a direction  $d\Omega$  about  $\Omega$  with energy E about dE

Collision operator

$$\sigma_t(\vec{r}, E)\Psi(\vec{r}, E, \hat{\Omega})$$


Number of particles removed from the volume by absorption or scattering

Scattering source External source

$$\hat{\Omega} \cdot \vec{\nabla} \Psi(\vec{r}, E, \hat{\Omega}) + \frac{\sigma_t(\vec{r}, E) \Psi(\vec{r}, E, \hat{\Omega})}{\sigma_t(\vec{r}, E) \Psi(\vec{r}, E, \hat{\Omega})} = Q^{\text{scat}}(\vec{r}, E, \hat{\Omega}) + \frac{Q^{\text{ex}}(\vec{r}, E, \hat{\Omega})}{\sigma_t(\vec{r}, E, \hat{\Omega})}$$

Number of scattered particles entering the volume

Brachytherapy sources

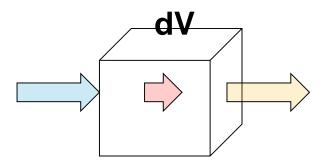

 $\Psi$  is the angular energy fluence at position r = (x, y, z), with energy E, and direction  $\Omega = (\mu, \eta, \zeta)$ .

### **MBDCA – Boltzmann Solver**

The most common deterministic approach has been historically known as 'discrete ordinates':

→ Discretization in space (finite element or finite difference), angle (discrete ordinates), and energy (multi-group cross sections)



The challenge is to solve this equation for every sub-volume (dV) of the total volume (patient).

# **Dosimetry Systems & Dose Calculation Procedures**

Pre-calculated dose distributions (atlases)


- Gynecology
  - Manchester
  - 0 ...
- Interstitial brachytherapy
  - Patterson-Parker (Manchester) system
  - Quimby (Memorial) system
  - Paris system
  - 0 ...
- Other (eye plaques, ect)

# **Dosimetry Systems & Dose Calculation Procedures**

# Gynecology (Manchester)

- Manchester system is characterized by doses to four points: point A, point B, bladder point, and rectum point.
- Duration of the irradiation is based on the dose rate at point A, which is located 2 cm superior to the cervical orifice (os) and 2 cm lateral to the cervical canal.
- Point B is defined 3 cm laterally to point A when the central canal is not displaced.

If the tandem displaces the central canal, point A moves with the canal, but point B remains fixed at 5 cm from the midline.

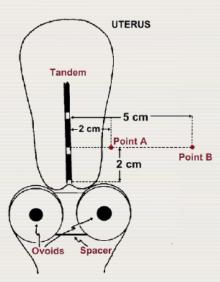

# 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS 13.3.1 Gynaecology

- The gynecological dosimetry system recommended by the ICRU (Report 38) relates the dose distribution to the target volume rather than to a specific point.
- The report identifies a dose level of 60 Gy as the appropriate reference dose level for LDR treatments. This results in a requirement to specify the dimensions of the pear-shaped 60 Gy isodose reference volume.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.1 Slide 8 (38/163)

#### 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS

#### 13.3.2 Interstitial brachytherapy

- Patterson-Parker (Manchester) system
  - The aim of this system is to deliver a uniform dose (within ±10% of the prescribed dose) throughout the target volume.
  - The sources are distributed non-uniformly, following certain rules, with more of the source strength concentrated in the periphery of the target volume.

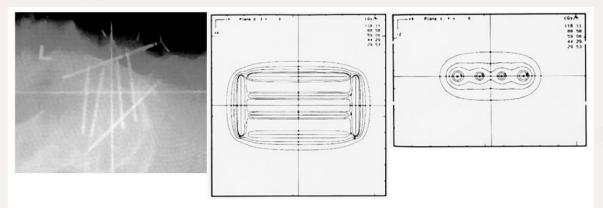




Fig 6.2: Manchester System for application of radioactive sources with different loading. Fig A shows the localisation film. Fig B and C give the distribution of dose rate for a single-plane implant with iridium wires of unequal linear activity in order to ensure dose uniformity throughout the implanted region. Wires 1, 4, 5 and 6 (peripheral) contain a linear activity of 60 MBq per cm; wires 2 and 3 contain a linear activity of 37MBq per cm. Wires 1, 2, 3 and 4 are 6 cm long; wires 5 and 6 are 3.5 cm long. Fig B gives the dose rates in the plane containing the wires,. Fig C in a perpendicular plane. (From Wambersie and Battermann [115])

#### 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS

#### 13.3.2 Interstitial brachytherapy

- Patterson-Parker tables
  - Single plane: The source arrangement treats a 1 cm thick slab of tissue. The prescribed dose is on a parallel plane 0.5 cm away from the source plane.
  - Double plane is used to treat slabs of tissue with thick-ness between 1 cm and 2.5 cm. The required total source strength is equally divided between the two planes.




Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.2 Slide 8 (50/163)

#### 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS

#### 13.3.2 Interstitial brachytherapy

- Paris system
  - The Paris system is used for single and double plane implants.
  - The general rules for the Paris system are as follows:
    - Sources must be linear and their placement must be parallel.
    - Centres of all sources must be located in the same (central) plane.
    - Linear source strength (activity) must be uniform and identical for all sources in the implant.
    - Adjacent sources must be equidistant from one another.

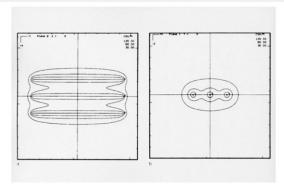



52/163)

Fig 6.3: Iridium-192 wire implant according to the Paris system (single-plane implant). The wires are of equal linear activity, parallel, and arranged in such a way that their centres are in the same plane perpendicular to the direction of the wires (i.e. the central plane, see Fig 6.4). (From Wambersie and Battermann [115])

# **Dosimetry Systems & Dose Calculation Procedures**

### Personalized/Computerized Treatment Planning

- Source/implant/applicator localization:
  - > Projections
  - Computerized tomography (CT) scanning
  - Ultrasound scanning (US)
  - Magnetic resonance imaging (MRI)
- Optimization
  - > Time/Activity
  - Position

### **Dose Calculation Procedures – LDR**

Permanent prostate implants (LDR)

- Seed activity
- Seed positions

Choose seed locations to meet some objectives

- Target coverage
- Dose uniformity
- OAR sparing




# **Brachytherapy – LDR**

lod-125

Low Dose Rate (LDR): <1 Gy/h

In order to achieve a total dose of ~144Gy, the radioactive emitter must remain in the tissue / organ until it has completely decayed

- → Permanent implant
- → The patient can go home as long as the local dose is 1m <5µSv/h ist

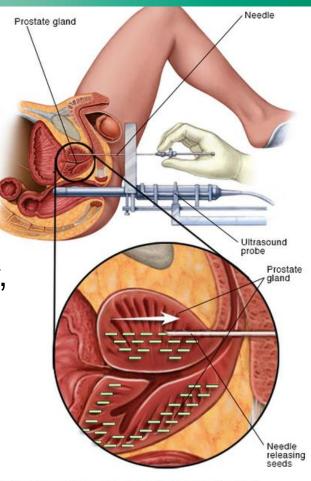





### **Dose Calculation Procedures – HDR**

Stepping source (HDR/PDR) brachytherapy offers two degrees of freedom to optimize the dose distribution:

- Dwell position
- Dwell time

There are two modes of optimization on the activated dwell positions:

- Forward optimization
- Inverse optimization

### **Dose Calculation Procedures – HDR**

The following forward optimization methods are implemented:

- Manual dwell weights/times optimization
- Geometrical optimization
- Optimization on dose points
- Graphical optimization

The following inverse optimization methods are implemented:

- Inverse Planning by Simulated Annealing (IPSA)
- Hybrid Inverse Planning Optimization (HIPO)

**Brachytherapy – Mamma Ca** 




Mamma Ca: Interstitial brachytherapy, partial breast radiation


# Planning – CT acquisition




# **Planning – Contouring**

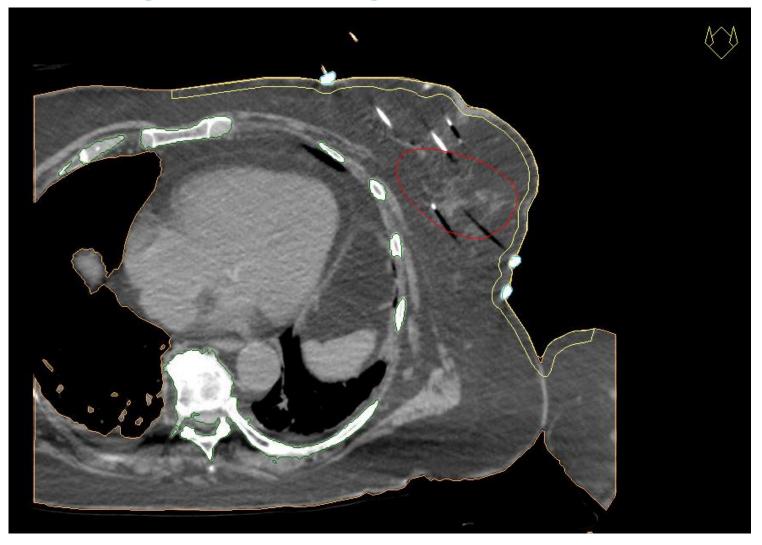



# **HDR Planning - Activation**

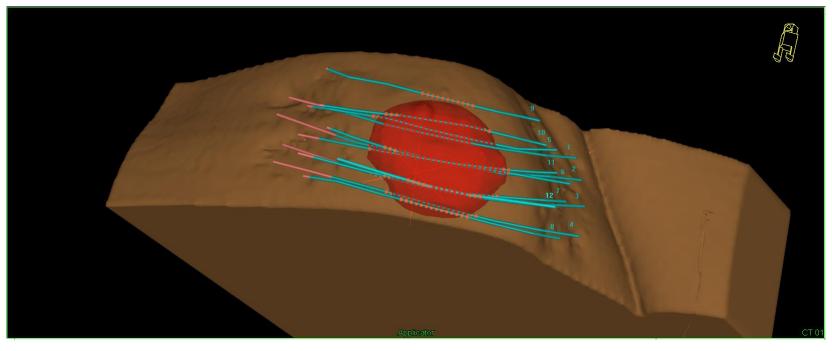

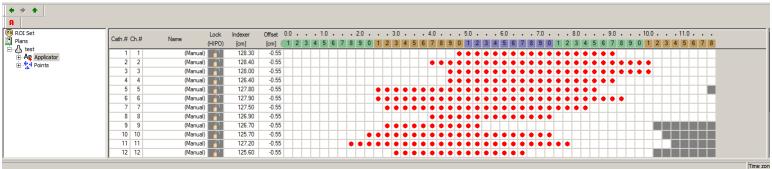


# **HDR Planning - Optimisation**

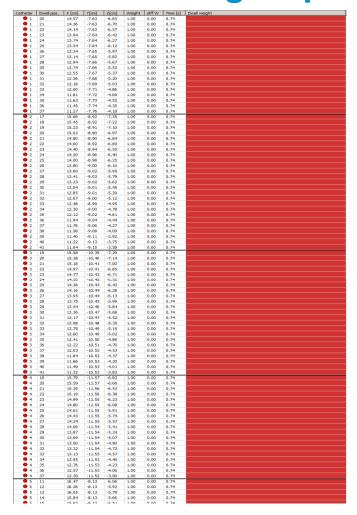


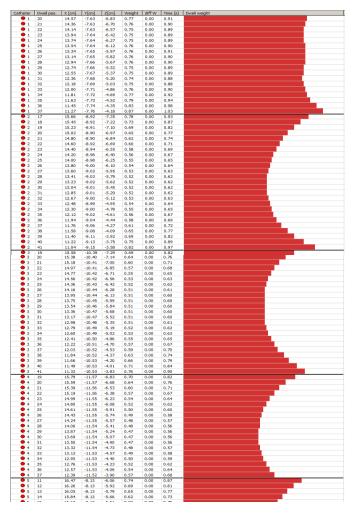


# **HDR Planning**

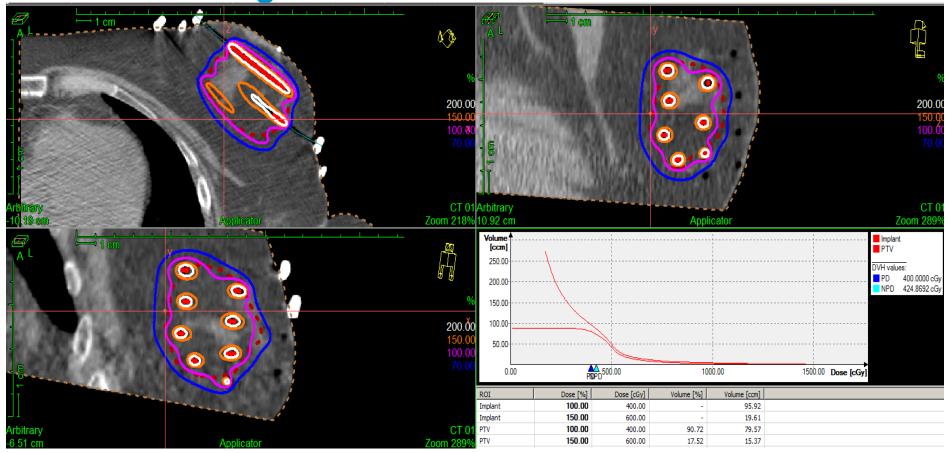


# **Brachytherapy – Intrauterine**

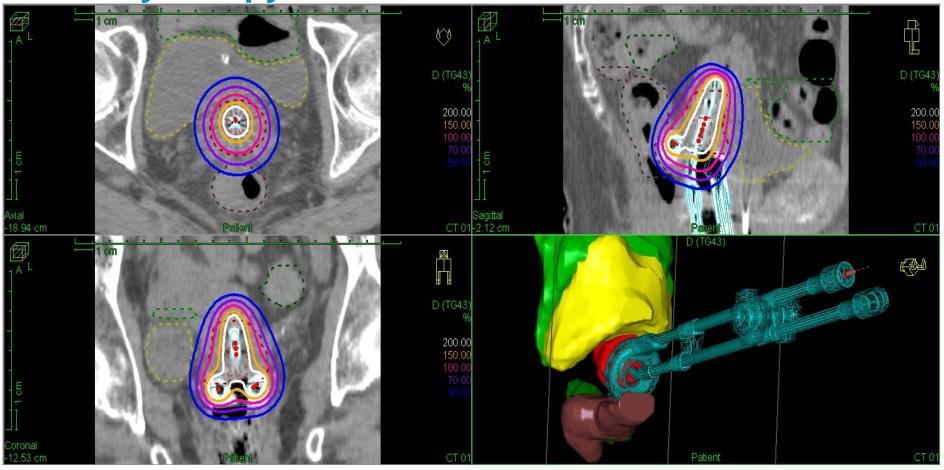



**Brachytherapy – Skull** 

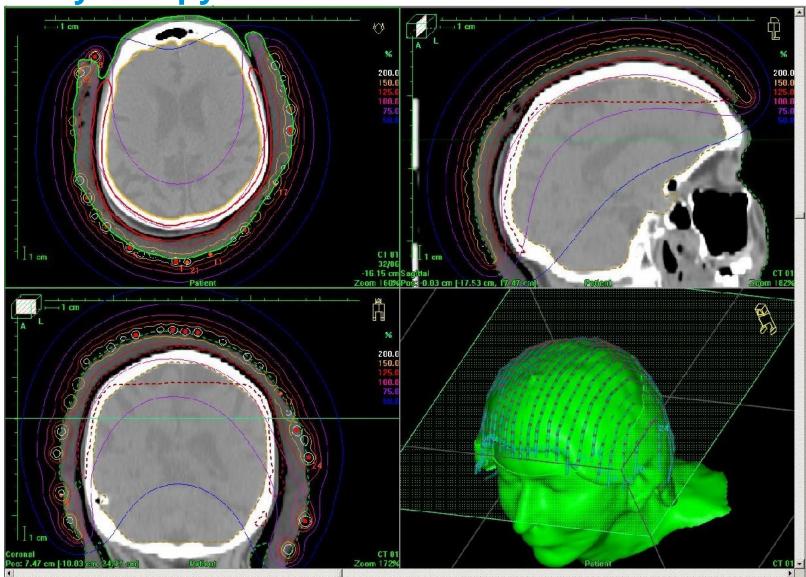


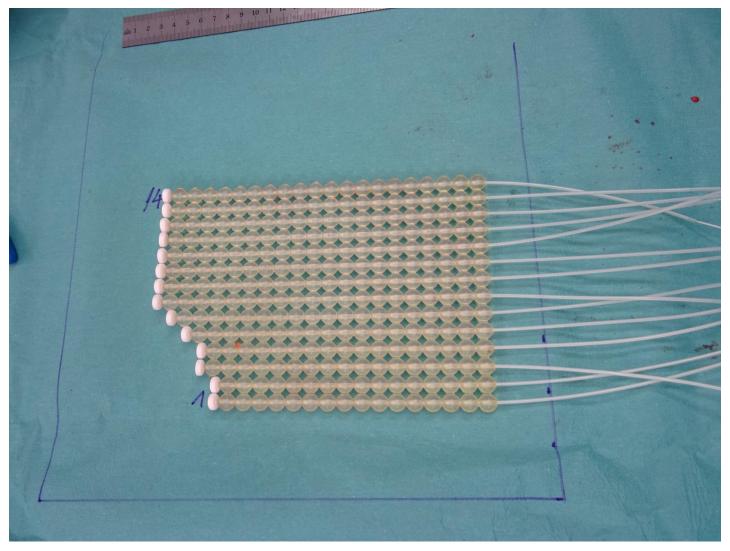



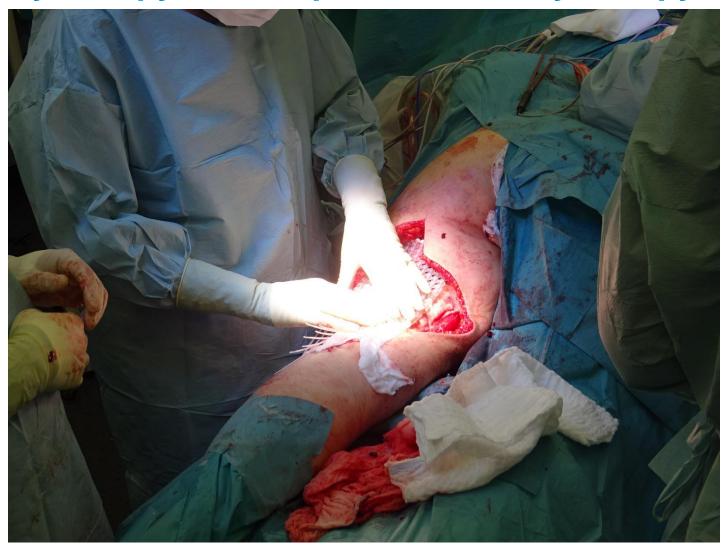

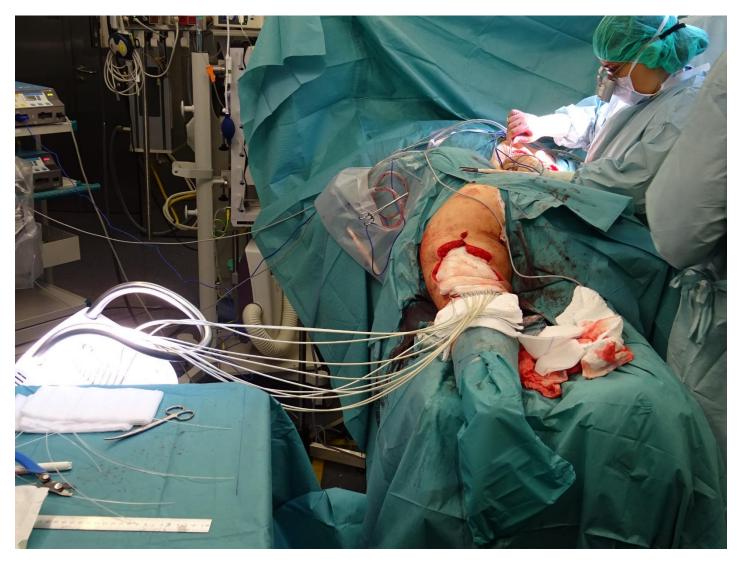

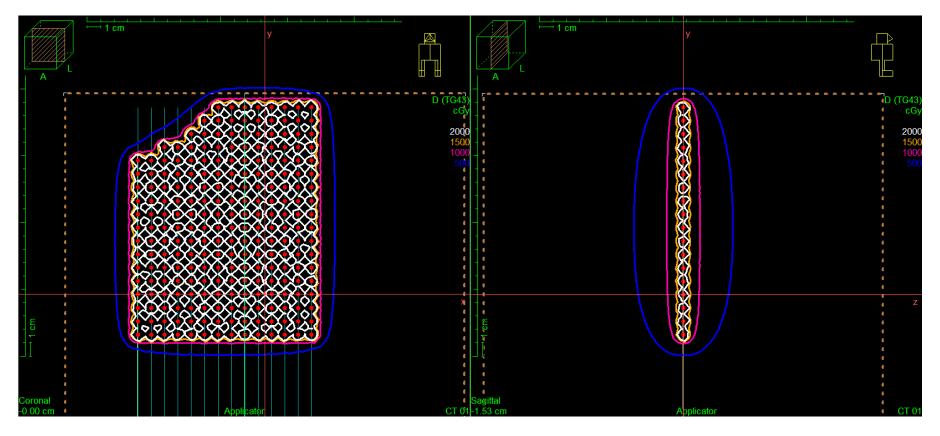

At the Inselspital IORTs are carried out:

- Tumors of the gastrointestinal tract
- Sarcomas
- Gynecological tumors
- Recurrent tumors

Prescription dose: 10 Gy @ 5mm tissue depth

#### 13.4 DOSE SPECIFICATION AND REPORTING

- Using standardized and uniform methodology, the ICRU Reports 38 and 58 recommend the minimum information that must be reported when performing brachytherapy treatments, such as:
  - Description of the implant.
  - Definition of the volume of interest.
  - Prescription dose.
  - Delivered dose.
  - Reference air kerma rate in air in cGy/h at 1 m.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.4 Slide 1 (73/163)


#### 13.4 DOSE SPECIFICATION AND REPORTING

#### 13.4.1 Intracavitary treatments

- Data recommended in the ICRU Report 38 for reporting of gynaecological brachytherapy are:
  - Description of technique.
  - Reference air kerma rate in air in cGy/h at 1 m.
  - Time/dose pattern.
  - Description of the reference volume.
  - Dose at reference points (bladder, rectum, pelvic wall, lymphatic trapezoid).
  - Dimensions of the pear shaped 60 Gy isodose reference volume....for LDR!



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.4.1 Slide 1 (74/163)

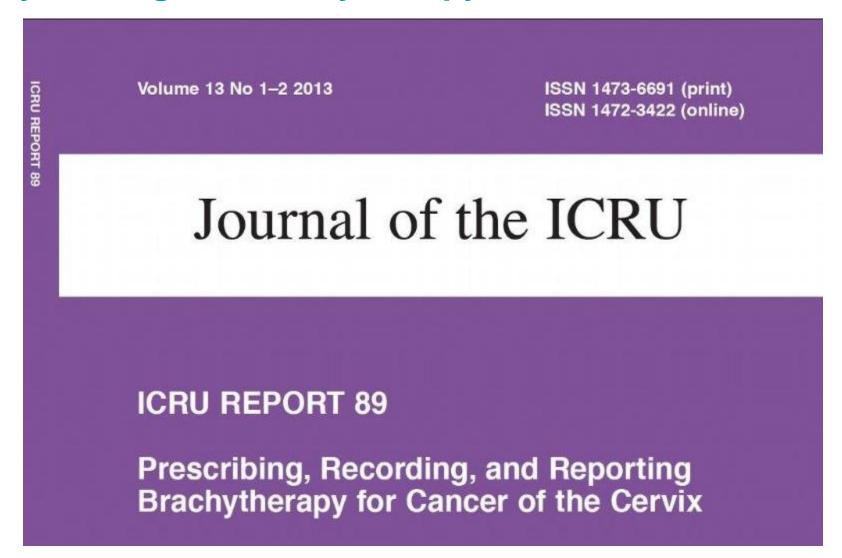

### **Table of Contents**

- 1 INTRODUCTION
- 2 PREVENTION, DIAGNOSIS, PROGNOSIS, TREATMENT AND OUTCOME
- 3 BRACHYTHERAPY TECHNIQUES AND SYSTEMS
- 4 BRACHYTHERAPY IMAGING FOR TREATMENT PLANNING
- 5 TUMOR AND TARGET VOLUMES AND ADAPTIVE RADIOTHERAPY
- 6 ORGANS AT RISK AND MORBIDITY-RELATED CONCEPTS AND VOLUMES
- 7 RADIOBIOLOGICAL CONSIDERATIONS
- 8 DOSE AND VOLUME PARAMETERS FOR PRESCRIBING, RECORDING, AND REPORTING OF BRACHYTHERAPY ALONE AND COMBINED WITH EXTERNAL BEAM RADIOTHERAPY
- 9 3D VOLUMETRIC DOSE ASSESSMENT
- 10 RADIOGRAPHIC DOSE ASSESMENT
- 11 SOURCES AND DOSE CALCULATION
- 12 TREATMENT PLANNING
- 13 SUMMARY OF THE RECOMMENDATIONS
- APPENDIX EXAMPLES, SPREADSHEETS, DRAWINGS

# Need for Common Terminology According to ICRU Reports on Proton Treatment and IMRT

- Planning aim dose
  - Set of dose and dose/volume constraints for a treatment
- Prescribed dose
  - Finally accepted treatment plan (which is assumed to be delivered to an individual patient)
- Delivered dose
  - Actually delivered dose to the individual patient

Chapter 8

# **Level Concept**

Concepts and terminology for prescribing

Reporting and recording in a level concept:

- •Level 1 Minimum standard for reporting
- Level 2 Advanced standard for reporting
- Level 3 Research-oriented reporting

# Level 1 – Minimum Standard for Reporting

- Comprehensive clinical gynecologic examination
- Volumetric imaging (MRI, CT, US, PET CT) at time of diagnosis and BT
- FIGO/TNM stage
- Baseline morbidity and QoL assessment
- Schematic 3D documentation on a clinical diagram indicating dimensions and volumes for:
  - GTV<sub>init</sub> ( GTV at diagnosis)
  - GTV<sub>res</sub> (GTV at brachytherapy)
  - CTV<sub>HR</sub> (GTV<sub>res</sub> (plus residual pathologic tissue plus whole cervix)
  - (CTV<sub>IR</sub>: GTV<sub>init</sub> and CTV<sub>HR</sub> plus safety margin if used for prescription)

# Level 1 – Minimum Standard for Reporting

### Dose reporting:

- TRAK
- Point A dose
- Recto-vaginal reference point dose
- D<sub>0.1cm³</sub>, D<sub>2cm³</sub> for bladder, rectum

or

Bladder reference point for radiographs

Chapter 8 and Chapter 10

### Level 2 - Advanced Standard for Reporting

### All that is reported in level 1 plus:

3D delineation of volumes (on volumetric images with applicator and on clinical diagrams):

- GTV<sub>res</sub>
- CTV HR
- (CTV is if used for prescription)
- With maximum width, height, thickness and with volume

Chapter 5

# **Gynecological Brachytherapy - ICRU 89**

# Level 2 – Advanced Standard for Reporting

### All that is reported in level 1 plus:

Dose reporting for defined volumes:

- D<sub>98</sub>, D<sub>90</sub>, D<sub>50</sub> for CTV<sub>HR</sub>
- (D<sub>98</sub>, D<sub>90</sub> for CTV<sub>IR</sub> if used for prescription)
- D<sub>98</sub> for GTV<sub>res</sub>
- D<sub>98</sub> for pathological lymph nodes

Chapter 8

BrachyNext - Working Together to Shape the Future of Brachytherapy

# **Gynecological Brachytherapy - ICRU 89**

# Level 2 – Advanced Standard for Reporting

### All that is reported in level 1 plus:

### Dose reporting OARs:

- Bladder reference point dose
- D<sub>0.1cm³</sub>, D<sub>2cm³</sub> for sigmoid\*
- D<sub>2cm³</sub> bowel (if fixed)\*
- Intermediate and low dose parameters in bladder, rectum, sigmoid, bowel (e.g. V<sub>25Gv</sub>, V<sub>35Gv</sub>, V<sub>45Gv</sub> or D<sub>98%</sub>, D<sub>50%</sub>, D<sub>2%</sub>)
- Vaginal point doses at level of sources (lateral at 5 mm)\*\*
- Lower and mid vagina doses (PIBS, PIBS ±2cm)\*\*

Chapter 8

BrachyNext - Working Together to Shape the Future of Brachytherapy

### 13.4 DOSE SPECIFICATION AND REPORTING

#### 13.4.2 Interstitial treatments

- Data recommended in the ICRU Report 58 for reporting of interstitial implant treatments are:
  - Description of the clinical target volume.
  - Sources, technique, and implant time.
  - Prescription dose.
  - Reference air kerma rate in air in cGy/h at 1 m.
  - Description of the dose distribution.
  - Description of the high and low dose region and dose uniformity indices.
  - Dose-volume histograms.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.4.2 Slide 1 (75/163)

### 13.4 DOSE SPECIFICATION AND REPORTING

#### 13.4.2 Interstitial treatments

- As far as dose distribution is concerned, four different dose related quantities are to be reported to adequately describe an implant treatment:
  - Total reference air kerma.
  - Mean central dose representing the plateau dose region inside the target volume.
  - Minimum dose, important for tumour control.
  - High dose regions exceeding 150% of the mean central dose and low dose regions that are below 90% of the peripheral dose.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.4.2 Slide 2 (76/163)

# References on dose specification & reporting

- ICRU 38 (1985): Dose and Volume Specification for Reporting Intracavitary Therapy in Gynaecology
- ICRU 89 (2013): Prescribing, Recording, and Reporting Brachytherapy for Cancer of the Cervix
- ICRU 58 (1997): Dose and Volume Specification for Reporting Interstitial Therapy
- American Brachytherapy Society (ABS) Recommendations for Transperineal Permaent Brachytherapy of Prostate Cancer (IJROBP 1999)
- SGSMP-Bericht 18 (1996): Dosis- und Volumenspezifikationen zur Dokumentation in der Brachytherapie
- www.estro.org/about/governance-organisation/committees-activities/gec-estrohandbook-of-brachytherapy
  - → Reporting in Brachytherapy: Dose and Volume Specification

# Thank you

...Questions?

# Clinical Use and Dosimetry Systems Application types

- Linear arrangements (vaginal cylinder, rectum, oesophagus, bronchus [one applicator only], peripheral vessels)
- Gynaecological applicators (fixed or adjustable geometry)
- Bronchus treatments with more than a single applicator
- Interstitial applications (head&neck, mamma)
  - LDR
  - HDR
- Prostate:
  - LDR (permanent seeds)
  - HDR (Afterloading)
- Intraoperative applications (individual needles, flab method)
- Eye plaques

- Intraocular melanoma is the most common primary malignant eye tumour in adults, originating mostly in the choroid (choroidal melanoma).
- Traditional treatment was enucleation (surgical eye removal).
- More recent treatment approaches rely on radiotherapy:
  - External beam radiotherapy with high energy x rays or charged particles.
  - Brachytherapy with temporary implants based on radioactive seeds loaded onto an eye plaque.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.5 Slide 1 (67/163)

## Brachytherapy treatment

- Eye plaque loaded with radioactive seeds is applied externally to the scleral (outer) eye surface over the tumour base.
- Radiation with appropriate dose is intended to eliminate tumour cells without causing anatomical or functional damage to normal ocular tissues.





Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.5 Slide 2 (68/163)

- Brachytherapy treatment with eye plaques
  - Most commonly used seeds are iodine-125 seeds with typical activities of the order of 1 mCi.
  - The number of seeds per plaque ranges from 7 to 24 for plaque diameters of 12 to 20 mm.
  - Typical treatment dose rates are of the order of 1 Gy/h and typical prescription doses are of the order of 100 Gy.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.5 Slide 3 (69/163)

- Brachytherapy treatment with eye plaques
  - Most commonly used seeds are iodine-125 seeds with typical activities of the order of 1 mCi.
  - A less common brachytherapy approach is based on beta emitting sources, such as strontium-90/ittrium-90 and, more recently, ruttenium-106



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.5 Slide 4 (70/163)

### 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS

### 13.3.6 Intravascular brachytherapy

- Application of radiation (using temporary or permanent implant) after treatment of arterial stenosis with angioplasty and stent placement has been proven useful in preventing re-stenosis.
- Restenosis is the formation of scar tissue in an artery within 6 months following angioplasty, occurring in about 40% of angioplasty patients.



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.3 Slide 1 (71/163)

### 13.3 CLINICAL USE AND DOSIMETRY SYSTEMS

#### 13.3.6 Intravascular brachytherapy

- Important characteristics of intravascular treatment are:
  - Type of source: electronic x ray, gamma ray, electron, positron
  - Physical form of radionuclide: wire, seed, pellet, metallic stent
  - Method of radiation delivery:
    - · Manual or remote afterloading;
    - Syringe and inflatable balloon;
    - Radioactive stent
  - Radionuclide
    - For use in afterloading: iridium-192; ittrium-90; strontium-90/ittrium-90.
    - For use in inflatable balloon: xenon-133; rhenium-186; rhenium-188
    - For use in radioactive stent: phosphorus-32; vanadium-48



Radiation Oncology Physics: A Handbook for Teachers and Students - 13.3.3 Slide 2 (72/163)